



Vacuum Instructional Guide

Preparation

Ensure the area you plan to vacuum is free of any large objects or debris that could clog the brushroll or hose. Remove toys, papers, and other obstacles from the floor.

Plug In

Inspect the power cord to ensure it is not frayed or tangled. Locate a nearby electrical outlet and plug in the power cord.

Adjust Settings

If applicable, adjust any settings/knobs for the surface you wish to clean such as Carpet or Hardwood.

Vacuuming

After powering on, slowly push the vacuum forward. Pull it back toward you to complete a pass. Repeat overlapping passes until the area is cleaned.

Emptying the Dustbin

To empty the dustbin, follow the below instructions.

1. Turn off and unplug the vacuum cleaner.
2. Remove dust cup by pulling latch upward and pivoting dust cup out and away from the cleaner.
3. Grasp dust cup lid and twist counterclockwise to remove.
4. Lift filter up and out of dust cup with a twisting motion.
5. Dispose debris in waste container and reattach the dust cup to the vacuum.
6. Replace filter onto center tube in dust cup, applying gentle pressure. Line up tabs on dust cup with opening on lid. Rotate lid clockwise while applying pressure to secure. The lock symbol on lid will be center over dust cup handle when properly assembled. To replace dust cup, position dust cup with handle facing inside the dust cup compartment. Place bottom of dust cup in bottom of compartment and rotate upward pushing dust cup against cleaner until it locks into place.

Storage

When you're finished using the vacuum, rewind the cord (if applicable) and return to the storage location.